

Multiple Colors Available, Match Your Style




SMART Quick start manual

SMART

Compact Color
Screen
ELRS
Transmitter



Full
function
small
size
radio



Space Gray



Platinum White



Lily Pink



Deco Yellow



Mint Green



Cyan Blue




Cold Purple

JumperTX

Brief introduction




Menu I

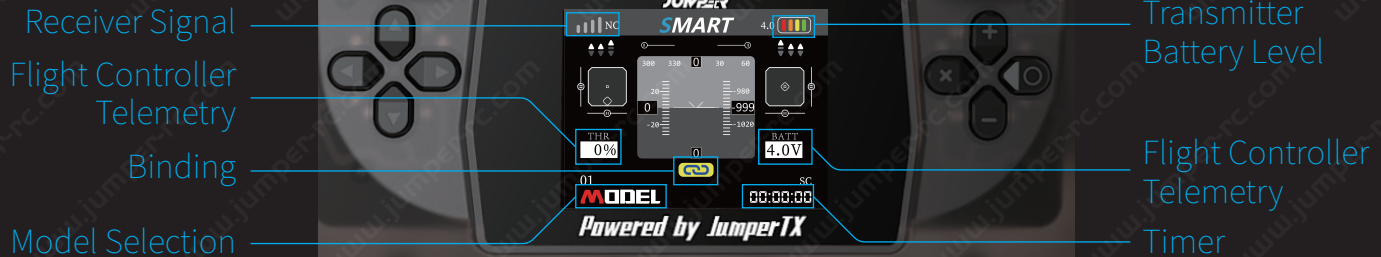


1. Press and hold the "O" button to enter the menu. Use the left-side directional buttons (Up, Down, Left, Right) to navigate through the menu. Adjust settings using the "+" and "-" buttons. The "O" button confirms selections, and the "X" button exits. Press and hold the "X" button to enter the flight controller switching menu.

Servo Travel Settings

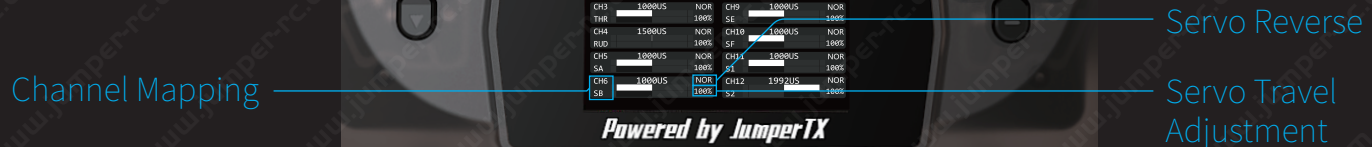


2. Press and hold the "O" button to enter the travel adjustment settings. Press the "O" button again to toggle between normal and reversed direction. Use the "+" and "-" buttons to adjust the travel range. The "X" button exits. Press and hold the "X" button to enter the channel mapping menu. Use the left-side directional buttons (Up, Down, Left, Right) to select the channel to be mapped. Use the "+" and "-" buttons to change the input source. The "X" button exits.

Mixer Selection

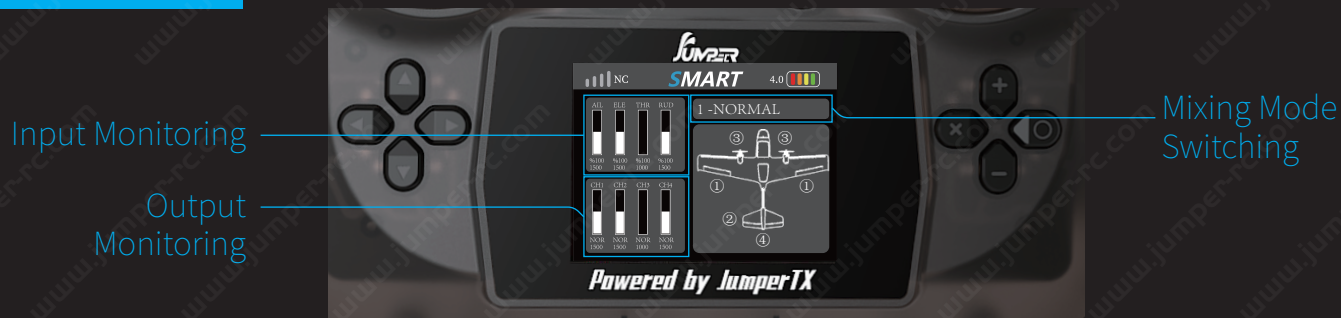

3. Press and hold the "O" button to enter the mixing settings. Use the left-side directional buttons (Up, Down, Left, Right) to set the direction (normal/reversed) and travel range for CH1-CH4. Press the "O" button again to toggle between normal and reversed direction. Use the "+" and "-" buttons to adjust the travel range. The "X" button exits.

System Menu

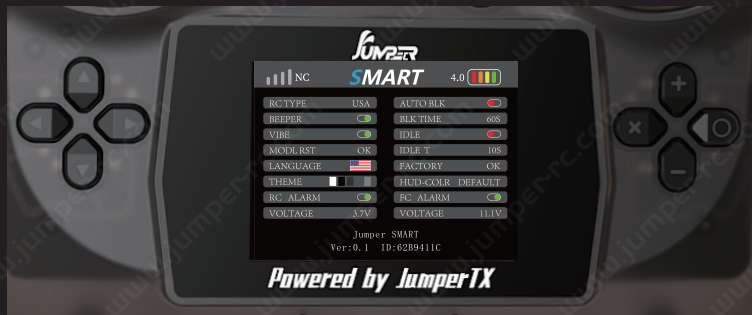

4. Configure settings as needed.

Note: If "Idle Alarm" is enabled, the transmitter will automatically shut down after the set "Alarm Time" is reached.

Note: If "Low Voltage Alarm" is enabled, the transmitter will automatically shut down when the voltage drops below the "Alarm Voltage."

For further updates, please follow our official announcements.